

ATD SERIES

AIR TOOL DRYER

REPLACEMENT KIT FOR ATD-1/2 - CL




Risk of injury. Release all air pressure from system before servicing.

>> HOW TO INSTALL A NEW REPLACEMENT KIT



- Open the camlock caps.
- Remove everything from the dryer but keep the grids. Leave the gaskets in the caps.
- Insert parts in the order shown on the other page.
- Open air supply SLOWLY. Check caps for air leakage. If leakage occurs, shut off air supply, relieve pressure from unit by manually activating the drain cock on the ATD. Make sure that the gaskets and covers are installed properly

>> INSTALLATION

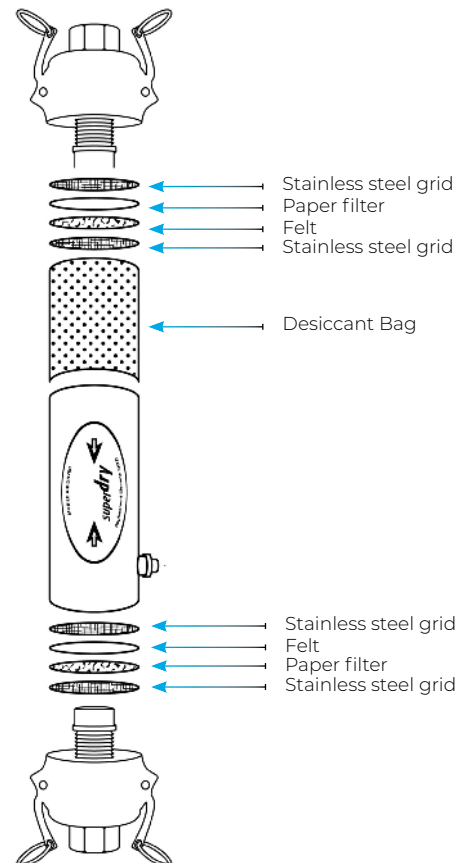

EATD-CL (P/N: 290-122) Desiccant Bag x 1
REPLACEMENT KIT Felt Pad x 2
INCLUDES : Paper Filter x 2